Настройка PPPoE-соединения на роутерах D-Link DIR-100/DIR-300

1. Зайти в браузер (Internet Explorer, Mozilla, Opera, или любой другой, использующийся на вашем компьютере) и в строке адреса набрать **192.168.0.1**.

В открывшемся окне в поле «User Name» вводим admin, поле «Password» оставляем пустым и нажимаем кнопку «Log In».

Product Page : DIR-300	-		Firmware Version : 1.01
D-Link			
LOGIN			
Log in to the router:			
	User Name admin		
	Password	Login	
WIRELESS			

2. Теперь нам нужно установить пароль на роутер. Для этого:

- В верхнем меню выбираем «SETUP».
- В меню слева выбираем «Internet Setup».
- В окне нажимаем кнопку «Internet Connection Setup Wizzard».

Product Page : DIR-	300				Firmware Version : 1.01
D-Lin	1k				\prec
DIR-300	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Internet Setup	INTERNET CONNEC	TION			Helpful Hints
Wireless Setup	If you are configuring	the device for the first time	, we recommend that you cl	lick on the Internet	 If you are new to networking and have never configured a router before,
LAN Setup	Connection Setup Wa	zard, and follow the instru- settings manually, click the	ctions on the screen. If you v Manual Internet Connection	wish to modify or n Setup	
Time and Date	compare are derived	contract of the second second second		n occup.	Connection Setup
Parental Control	INTERNET CONNEC	TION SETUP WIZARD			Wizard and the router will quide you through a few
Logout Corrine Reboot	If you would like to uti D-Link Systems Rout Note: Before Isunchin Quick Installation Gui	lize our easy to use Web-t er to the Internet, click on t Internet Conne ig the wizard, please make de included in the packag	ased Wizard to assist you i the button below. ction Setup Wizard e sure you have followed all e.	n connecting your new steps outlined in the	 Intervent up and running. If you consider yourself an advanced user and have configured a router before, click Manual Internet Connection Setup to input all the settings manually.
	MANUAL INTERNE	T CONNECTION OPTIO	NS s of your new D-Link Router t Connection Setup	r manually, then click on	

3. В появившемся окне нажимаем кнопку «Next».



4. Придумайте и введите новый пароль, который вы будете вводить в будущем для изменения настроек роутера. Введите также подтверждение нового пароля, нажмите кнопку «**Next**».

-Link						
STEP 1: SE	YOUR PASSWOR	D				
By default, yo configuration	ur new D-Link Router pages. To secure you V	does not have a p r new networking Password : [• erify Password : [•	assword configure device, please set	d for administrato and verify a passv 	r access to the Web-bas vord below:	sed
		Prev	Next Cancel			
ic.						

5. Выберите часовой пояс, нажмите кнопку «Next».

Product Page :	: DIR-300 Firmv	vare Version : 1.01
D-L	intr'	-
	STEP 2: SELECT YOUR TIME ZONE	
	Select the appropriate time zone for your location. This information is required to configure the time-based options for the router.	
	(GMT+03:00) Moscow, St. Petersburg, Volgograd	
	Prev Next Cancel	
WIREL	ESS	

6. Выберите пункт «Username/Password (PPPoE)», нажмите кнопку «Next».



Введите ваши учетные данные на подключение к Интернету (см. страницу договора «Идентификационные коды абонента»):

«User name» — Ваш логин;

«Password» — Ваш пароль;

«Verify Password» — Подтверждение пароля.

Нажмите кнопку «Next».

in te	
SET USERNAME AND PASSWORD CONNECTION (PPPOE)	
To set up this connection you will need to have a Username and Password from your Internet Service Provider. If y do not have this information, please contact your ISP.	ou
Address Mode : 🖸 Dynamic IP C Static IP	
IP Address :	
User Name : Bau nones	
Password :	
Verify Password : ••••••	
Service Name : (Optional)	
Note: You may also need to provide a Service Name. If you do not have or	
know this information, please contact your tor.	
Prev Next Cancel	

8. Нажмите кнопку «Connect».

Product Page : DIR-300	Firmware Version : 1.01
D-Link	
SETUP COMPLETE!	
The Setup Wizard has completed. Click the Connect button to save your settings and reboot the router. Prev Connect Cancel	
WIRELESS	
WIRELESS	

Настройка роутера **D-Link DIR-100** на этом завершена. Если у вас роутер **D-Link DIR-300**, то также необходимо настроить беспроводную сеть:

- 9. В верхнем меню выбираем «SETUP».
- В меню слева выбираем «Wireless Setup».
- В окне нажимаем кнопку «Manual Wireless Connection Setup».



10. «Security Mode» выберите «Enable WPA/WPA2 Wireless Security (enhanced)». «WEP key» введите 10-ти значный ключ. Этот ключ беспроводное устройство будет запрашивать при подключении к беспроводной сети. Рекомендуем использовать серийный номер роутера (s/n, закреплен на нижней стороне роутера) — даже если вы забудете ключ беспроводной сети, то в любой момент сможете его восстановить.

DIR-300	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Internet Setup	WIRELESS NETWO	Helpful Hints			
Wireless Setup LAN Setup Time and Date Parental Control Logout	views Setup Use this section to configure the wireless settings for your D-Link router. Please note that changes made on this section may also need to be duplicated on your wireless client. and Date To protect your privacy you can configure wireless security features. This decive supports three wireless security modes including: WEP, WPA and WPA2. out Dest form Cuttors				
Internet Offline	WI-FI PROTECTED	SETUP (ALSO CALI	ED WCN 2.0 IN WINDOWS	VISTA)	centified Windows Vista driver in order to take advantage of this feature • Changing your Wireles
Reboot	Wi-Fi F	Enable : V Current PIN : 5097: Protected Status : Enab	5792 nerate New PN Reset P led / Not Configured Add Wireless Device with WPS	₩ to Default	Network Name is the first step in securing your wireless network. We recommend that you change it to a familiar name that does not contain any personal information. • Enabling Hidden Mode is
	WIRELESS NETWO	ORK SETTINGS			another way to secure your network. With this
	E Wireless Enable Auto Ch Wi Trai	nable Wireless : Network Name : Test annel Selection : reless Channel : 6 nsmission Rate : Bes WMM Enable : 0	(Also calle	ed the SSID)	option enabled, ho wreases clients will be able to see your wireless network when they perform scan to see what's available. In order for your wireless devices to connect to your router, you will need to manually enter the Wireless Network Name on each devices.
	Enable H	lidden Wireless : 🔲 (Also called the SSID Broadcas	t)	If you have enabled
	WIRELESS SECUR	Security Mode : Ena	ble WPA/WPA2 Wireless Security	(enhanced) 👻	 Wireless Security, make sure you write down WEP Key or Passphrase that you have configured. You will need to enter this
	WPA/WPA2	information on any wireless device that you connect to your wireless network.			
	WPAWPA2 requires :	Cipher Type : TKP PSK / EAP : PSK prk Key : ******	e encryption and authenticati	on. 8-63 ASCII or 64 HEX)	
	Save Settings	Don't Save Settings	Ри	сунок 2)	

11. Сохраните настройки нажатием кнопки «Save Settings». На этом настройка роутера завершена.